




# OWNERS MANUAL

# Main Board Diagram

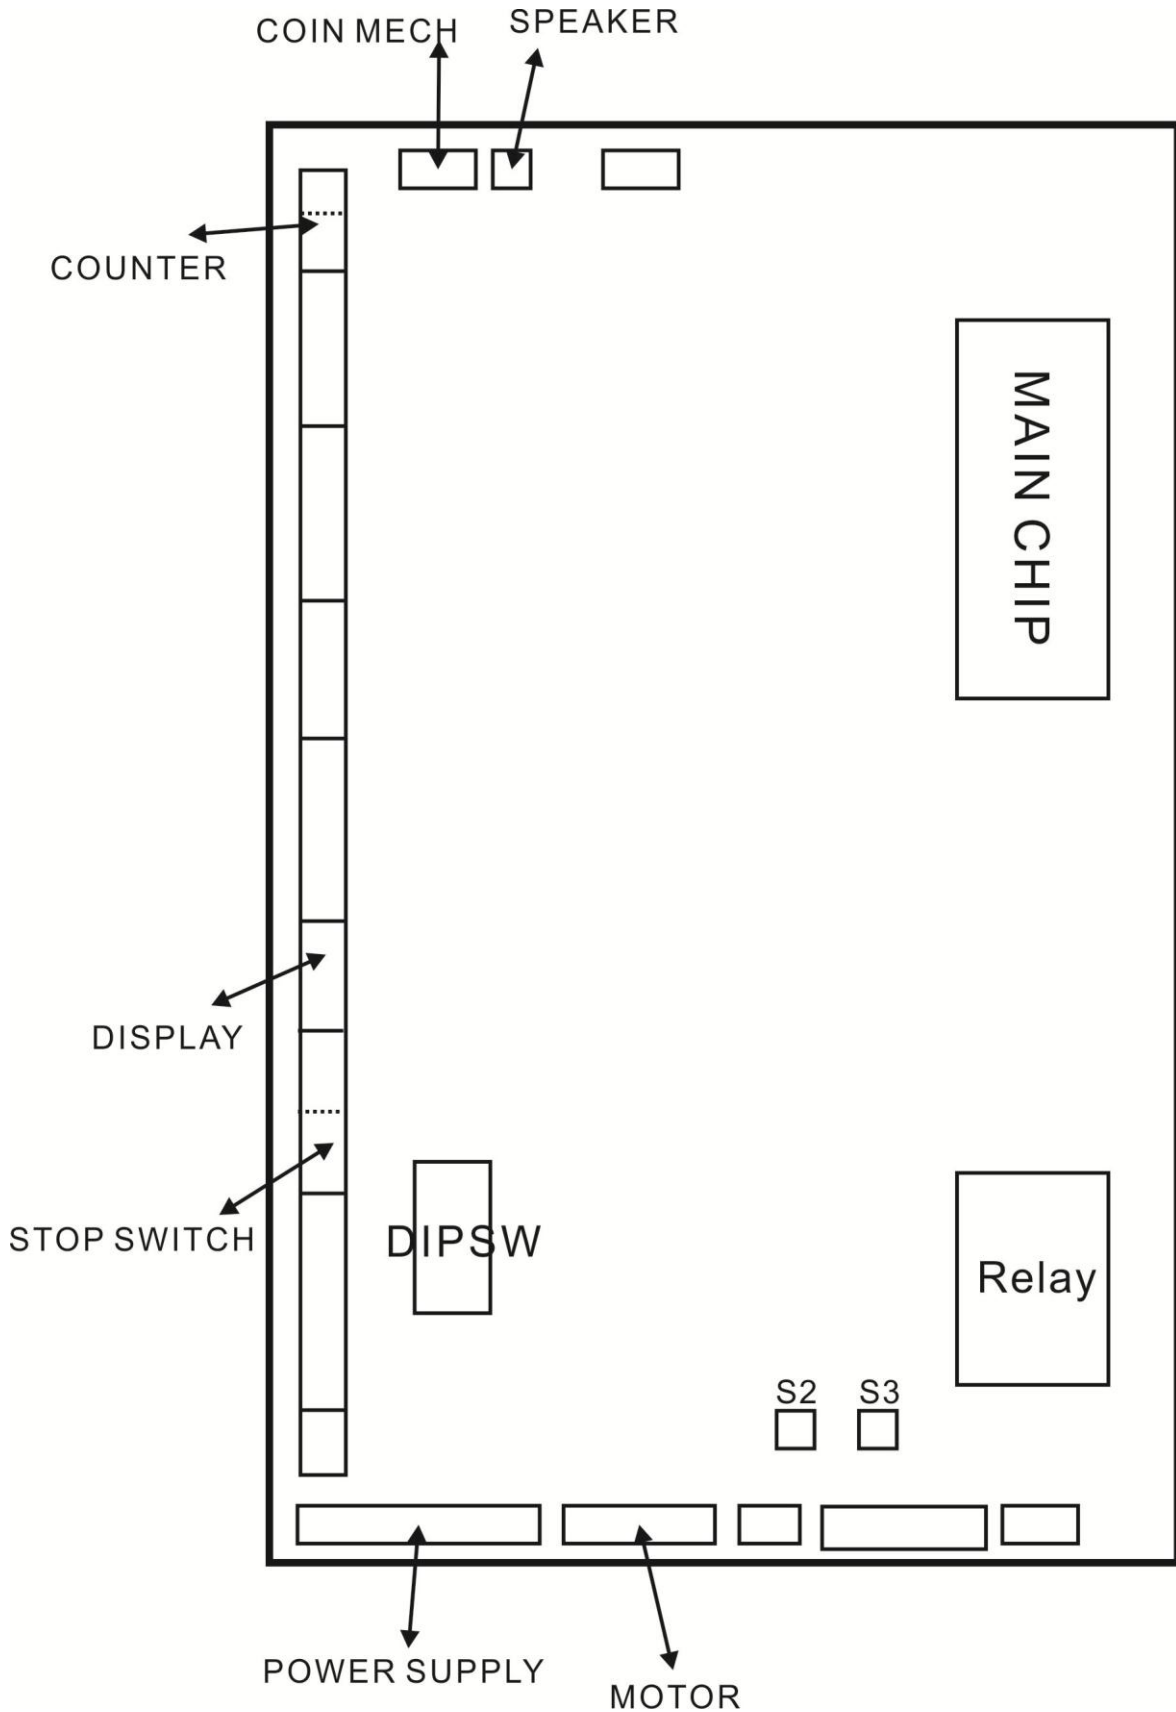

## **SETTING**

1. PRESS "S3" BUTTON AND TURN ON THE MACHINE.
  2. ENTER THE SETTING MODE.
  3. "S2" BUTTON TO CHANGE THE VALUE. "S3" BUTTON TO SWITCH DIFFERENT SETTING.
  4. SE1=PRIZE VALUE  
SE2=COIN VALUE(1 COIN=X CREDIT)  
SE3=TIMING TO GIVE OUT AN EGG PER PLAY.
- AFTER SE3 WILL ENTER DISPLAY TEST MODE. "S2" TO CHANGE THE TEST DIGIT.

## **ERROR CODE**

1. 03=MEMEORY ERROR
2. 30=COIN ERROR
3. 27=PRIZE MICROSWITCH ERROR, MOTOR ERROR, RUN OUT OF PRIZE

## Monkey Bizz Wiring Diagram

JP5	Motor	JP1	Power Supply	JP2	Stop Switch	JP15	Display
12V	Black					5V	Brown
-	Red	12V	Red				Red
				+	Red		Orange
		GND	Black	GND	Black		Yellow
						GND	Green
		5V	Yellow				

JP9	Counter	JP8	Coin Mech	SP	
12V	Red	5V	Orange	+	Black
In	Orange	+	Brown	-	Red
Out	Brown	-	Black		